Introduction to Embedded Systems (IES)

Installing Arduino Portable on Windows 10 Version 2022-11-10, Kjeld Jensen kjen@sdu.dk

Content

This document describes how to install the Arduino programming software for this course on Windows 10 computers.

This method uses *Arduino Portable* and is a simple procedure:


- 1.Download a compressed (arduino.zip) file from the internet containing all necessary files for Arduino
- 2.Copy arduino.zip to a USB key
- 3.Copy arduino.zip from the USB key to other computers
- 4.On each computer extract all files from arduino.zip
- 5. Verify that the installation is successful

Download Arduino zip file

Use a computer with internet access to download the Arduino zip file.

Link: <u>https://kjen.dk/go/ies/arduino</u>

When clicking the link you will see a page like below (in your language). Click the Download button.

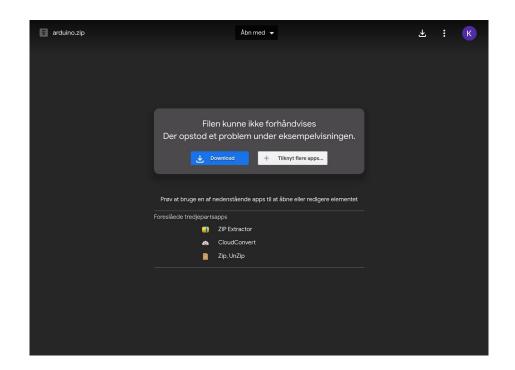


The file size is about 750 Mb so it may take some time depending on the internet speed.

The arduino.zip software is originally from <u>https://arduino.cc</u> and <u>https://github.com/earlephilhower/arduino-pico/releases/download/global/</u> package_rp2040_index.json

Copy arduino.zip to a USB key


When the download is finished, the file arduino.zip will be in your Downloads folder:

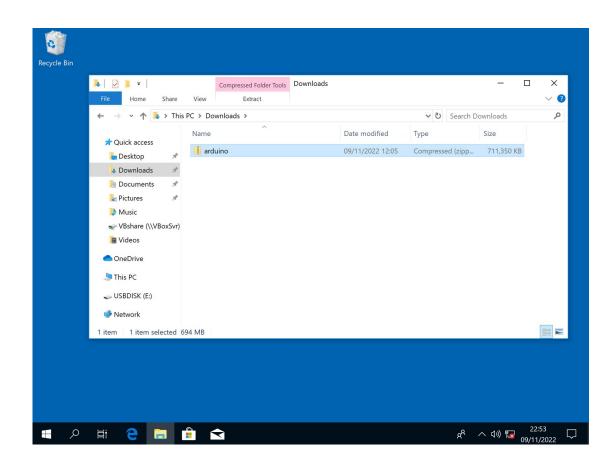

Insert a USB key into your computer and copy the arduino.zip file to the USB key


Copy arduino.zip to other computers

Insert the USB key into other computers needing the installation and copy the arduino.zip file to the Desktop

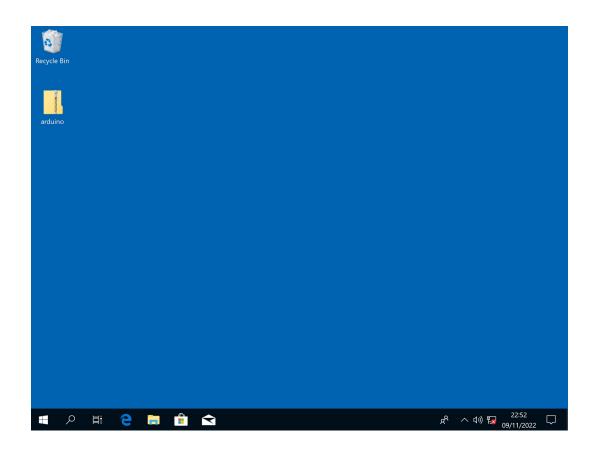

Extract all files from arduino.zip


Right click the arduino.zip file on the Desktop, then select Extract all...

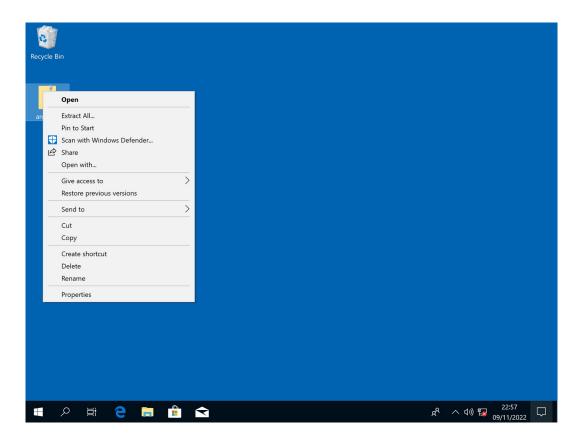

Click the Extract button

Recycle Bin			
arduino	 Extract Compressed (Zipped) Folders Select a Destination and Extract Files Files will be extracted to this folder: C<\Users\kjeld\Desktop\arduino Show extracted files when complete 	Browse	
		Extract Cancel	
🔳 🔎 🖽 🧲	💼 💼 🛋	e ^R へ (小) 😰 22:58 09/11/2022	\Box

Then wait until completed, this may take some time

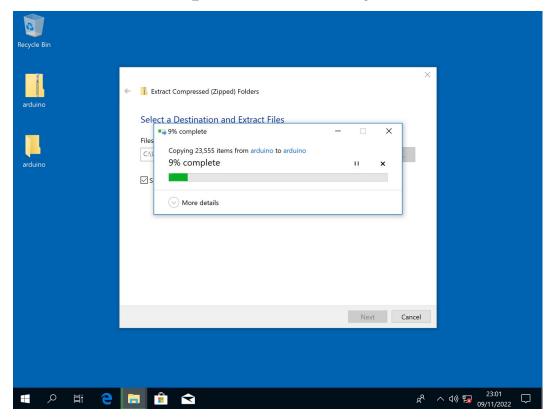

Verify that the installation is successful

Open the arduino folder, then click the arduino file:

ecycle Bin	Image: Image	Application Tools arduino View Manage		-	
1	$\leftarrow \rightarrow \checkmark \uparrow$] > This	PC > Desktop > arduino	·	・ ひ Search arduino	م
		Name	Date modified	Туре	Size
rduino	🖈 Quick access	drivers	09/11/2022 23:01	File folder	
	늘 Desktop 🛛 🖈	examples	09/11/2022 23:01	File folder	
	🔈 Downloads 🛛 🖈	hardware	09/11/2022 23:01	File folder	
	🛅 Documents 🛛 🖈	iava	09/11/2022 23:01	File folder	
	Networks 🕺 🖈	lib	09/11/2022 23:01	File folder	
duino	Music	libraries	09/11/2022 23:01	File folder	
	VBshare (\\VBoxSvr)	portable	09/11/2022 23:05	File folder	
	Videos	L tools	09/11/2022 23:05	File folder	
	Videos	📜 tools-builder	09/11/2022 23:05	File folder	
	le OneDrive	💿 arduino	20/12/2021 17:13	Application	72 KE
	🕒 This PC	🔊 arduino.l4j	20/12/2021 17:13	Configuration settings	1 KE
	C Initia C	🥯 arduino_debug	20/12/2021 17:13	Application	69 KI
	🥪 USBDISK (E:)	🔊 arduino_debug.l4j	20/12/2021 17:13	Configuration settings	1 KE
	Network	🔳 arduino-builder	20/12/2021 17:12	Application	23,156 Ki
	- Hethone	🛸 libusb0.dll	20/12/2021 17:12	Application extension	43 KI
		🛸 msvcp100.dll	20/12/2021 17:12	Application extension	412 KE
		svcr100.dll	20/12/2021 17:12	Application extension	753 KE
		revisions	20/12/2021 17:12	Text Document	97 KE
		🖹 wrapper-manifest	20/12/2021 17:13	XML Document	1 KE
		<			
	19 items 1 item selected				

Your installation is successful if the Arduino software opens like below:

File Hone Image: Control of the con			😒 sketch_nov09a Arduino 1.8.19 — 🗆 🗙	1
File Home File Home Sketch_novO9a Void setup() { // put your setup code here, to run once: // put your main code here, to run repeatedly: // put your main code here, to run repeatedly: // put your main code here, to run repeatedly: // Uddes OneDrive This PC USBDISK (Network 1 Respery PI Pco. 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPM Onty 1 1 Respery PI Pco. 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPM Onty 1<	Recycle Bin		File Edit Sketch Tools Help	
arduno arduno				□ × ~ 0
<pre>arduino arduino a</pre>		$\leftarrow \rightarrow \vee \uparrow$	sketch nov09a	م
arduno Quick acc Quick acc Quick acc Qu				
i Downlog i Docume i Pictures i Music i VBshare i Videos i OneDrive i This PC i USBDISK (i Network i Raspberry PI Pico. 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPA4 Only	arduino	📌 Quick acce	// put your setup code here, to run once:	Size
Image: Second Coop() { // put your main code here, to run repeatedly: Image: Pictures Music Image: VSshare ? Image: VSshare ? </td <td></td> <td>🔚 Desktop</td> <td>}</td> <td></td>		🔚 Desktop	}	
Image: Second Copy() { Image: Second Copy()		👃 Downloa		
arduno			void loop() {	
arduno Music VBshare OneDrive SThis PC Strideos Network Resolution Resoluti			// pac four marn boab horof to ran repourbart.	
VBshare Wides OneDrive This PC USBDISK (USBDISK (Network Intervent Inte	arduino		}	
ConeDrive OneDrive This PC USBDISK (Network Instable (Disabled, Disabled, Disabled, None, Pico SDK, IPvd Only Instable (Disabled, Disabled, Disabled, Disabled, None, Pico SDK, IPvd Only Instable (Disable (
OneDrive This PC USBDISK (USBDISK (Network Interview of the selected 71.5 KB				
 This PC USBDISK (Network 1 Raspberry Pi Pico. 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Ony 1 Raspberry Pi Pico. 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Ony 		Videos		
Ins PC USBDISK (USBDISK (Network Instruction (Instructio		🔷 OneDrive		72 KB
USBDISK (Network Net		🗢 This PC		1 KB
 Network 23:55 43 412 753 97 1 Raspberry Pi Pico. 2MB (no FS), 133 MHz. Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only 19 items 1 item selected 				69 KB
Network A3 43 412 753 97 1 Raspberry Pi Pico, 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Onty 19 items 1 item selected 71.5 KB		🥪 USBDISK (1 KB
1 Raspberry Pi Pico. 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only		🕩 Network		23,156 KB
753 97 1 1 Raspberry Pi Pico. 2MB (no FS), 133 MHz, Small (-Os) (standard). Disabled, Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Onty c 19 items 1 item selected 71.5 KB				43 KB
97 1 Raspberry Pi Pico. 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only 4 19 items 1 item selected 71.5 KB				412 KB
1 Raspberry Pi Pico, 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only 1 19 items 1 item selected				753 KB 97 KB
Raspberry Pi Pico, 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only				97 KB
< 19 items 1 item selected 71.5 KB				TKD
19 items 1 item selected 71.5 KB			1 Raspberry Pi Pico, 2MB (no FS), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only	
			¢	>
		19 items 1 it	em selected 71.5 KB	
	م I	di	📑 🔒 < 💿 🕺 😭	23:08